
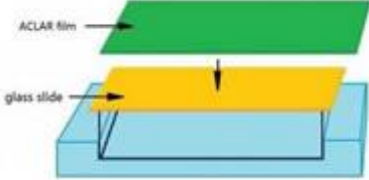


# Flat Embedding Crystal



## Catalog D71184

### Flat Embedding

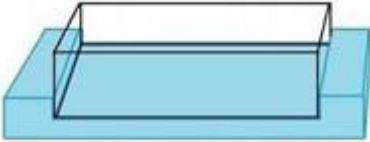


1. Place the big crystal on the hold

2. Place the glass slide and the ACLAR film on the big crystal (The ACLAR Film is a little bigger than the glass slide)

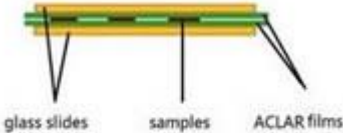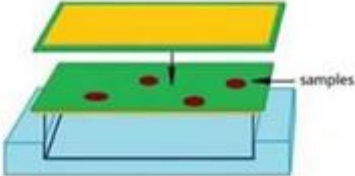

3. Place the samples on ACLAR Film, then place another ACLAR Film and glass slide on top

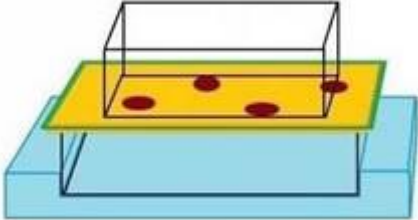

4. Place the small crystal on the glass slide